HOW TO PREPARE YOUR MACHINE FOR SEWING

REMOVING BOBBIN CASE AND BOBBIN

See Page 2 for Lettered Parts of Machine

Turn the hand wheel (D) toward you until the take-up lever (T) is at its highest point. Raise hinged bobbin case cover (O). To remove the bobbin case, open the latch with the forefinger and pull latch toward you (see Fig. 1). Now use thumb and forefinger and pull the bobbin case out toward you. While the latch is held open, the bobbin is retained in its case. On releasing the latch and turning the case downward, the bobbin will drop out.

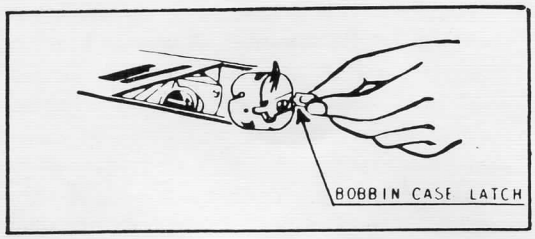

Fig. 1 To Remove Bobbin Case and Bobbin

WINDING THE BOBBIN

1. To wind the bobbin disconnect the hand wheel from the stitching mechanism (Fig. 7, Page 5). By turning the stop motion knob (Fig. 7) toward you with the right hand (while holding the hand wheel with the left hand) disconnect the sewing mechanism for the bobbin winding operation. This is necessary to prevent damage to your machine while winding the bobbin.
2. Lower the presser foot (N) Page 2, by lowering the presser foot lever. Swing spool pin (on back of arm) away from machine and raise bobbin winder cover and cam cover as shown in Fig. 2.
3. Now proceed as follows (see Fig. 2 below):
   a. Place the bobbin (A) on the bobbin winder spindle (B) and push it down firmly against the spindle base.
   b. By pressing in on the bobbin winder lever (C), the bobbin winder rubber ring is brought into contact with the hand wheel. To lock, press in until a click is heard.
   c. Place thread on spool pin on back of arm, run thread through thread guide discs (D) from back to front.
   d. Run thread through thread guides (E) and put the thread through any hole in top side of bobbin from the inside out. Leave 3 or 4 inches of thread projecting from the bobbin.
   e. The loose end of the thread should be held by hand until a few coils are wound, then break off the loose end.
   f. Now use the electric controller in the same manner as when sewing.
   g. When the bobbin is completely wound, the bobbin winder release latch (F), disengages the bobbin winder automatically.
4. CAUTION. Do not wind the bobbin so full that the thread extends beyond the sides of the bobbin.

Note: To replace the bobbin winder rubber ring, remove 3 screws (G). Complete assembly can be lifted out for easy replacement of rubber ring.

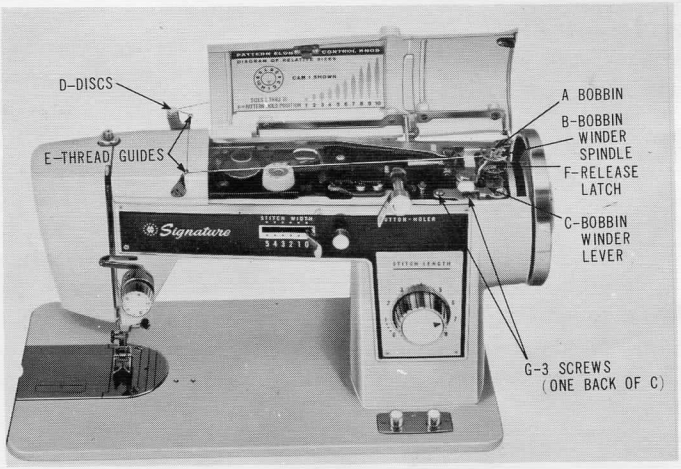

Fig. 2 Winding the Bobbin